

**Manual** EN

**Handleiding** NL

**Manuel** FR

**Anleitung** DE

**Manual** ES

**Användarhandbok** SE

**Appendix** Appendix

**Battery Monitor**

BMV-700

BMV-700H

BMV-702

BMV-712 Smart



## 1 QUICK START GUIDE

- 1.1 Battery capacity
- 1.2 Auxiliary input (BMV-702 and BMV-712 Smart only)
- 1.3 Important combined button functions

## 2 NORMAL OPERATING MODE

- 2.1 Read-out overview
- 2.2 Synchronising the BMV
- 2.3 Common problems

## 3 FEATURES AND FUNCTIONALITY

- 3.1 Features of the three BMV models
- 3.2 Why should I monitor my battery?
- 3.3 How does the BMV work?
  - 3.3.1 About battery capacity and the rate of discharge
  - 3.3.2 About charge efficiency (CEF)
- 3.4 Several battery state of charge display options
- 3.5 History data
- 3.6 Use of alternative shunts
- 3.7 Automatic detection of nominal system voltage
- 3.8 Alarm, buzzer and relay
- 3.9 Interface options
  - 3.9.1 PC Software
  - 3.9.2 Large display and remote monitoring
  - 3.9.3 Custom integration (programming required)
- 3.10 Additional functionality of the BMV-702 and BMV-712 Smart
  - 3.10.1 Auxiliary battery monitoring
  - 3.10.2 Battery temperature monitoring
  - 3.10.3 Midpoint voltage monitoring
- 3.11 Additional functionality of the BMV-712 Smart
  - 3.11.1 Automatic cycling through status-items
  - 3.11.2 Turning Bluetooth On/Off

## 4 FULL SETUP DETAILS

- 4.1 Using the menus
- 4.2 Function overview
  - 4.2.1 Battery settings
  - 4.2.2 Relay settings
  - 4.2.3 Alarm-Buzzer settings
  - 4.2.4 Display settings
  - 4.2.5 Miscellaneous
- 4.3 History data

## 5 MORE ABOUT PEUKERT'S FORMULA AND MIDPOINT MONITORING

## 6 LITHIUM IRON PHOSPHATE BATTERIES (LiFePO<sub>4</sub>)

## 7 DISPLAY

## 8 TECHNICAL DATA

## Safety Precautions



- Working in the vicinity of a lead acid battery is dangerous. Batteries can generate explosive gases during operation. Never smoke or allow a spark or flame in the vicinity of a battery. Provide sufficient ventilation around the battery.
- Wear eye and clothing protection. Avoid touching eyes while working near batteries. Wash your hands when done.
- If battery acid contacts skin or clothing, wash them immediately with soap and water. If acid enters an eye, immediately flood the eye with running cold water for at least 15 minutes and get medical attention immediately.
- Be careful when using metal tools in the vicinity of batteries. Dropping a metal tool onto a battery might cause a short circuit and possibly an explosion.
- Remove personal metal items such as rings, bracelets, necklaces, and watches when working with a battery. A battery can produce a short circuit current high enough to melt objects such as rings, causing severe burns.

## Transport and storage

- Store the product in a dry environment.
- Storage temperature: -40°C to +60°C

# 1 QUICK START GUIDE

This quick start guide assumes that the BMV is being installed for the first time, or that factory settings have been restored.

Please see the appendix at the end of this manual for wiring suggestions.

The factory settings are suitable for the average lead acid battery: flooded, GEL or AGM.

The BMV will automatically detect the nominal voltage of the battery system immediately after completion of the setup wizard (*for details and limitations of automatic nominal voltage detection, see section 3.8*).

Therefore the only settings which need to be made are the battery capacity (BMV-700 and BMV-700H), and the functionality of the auxiliary input (BMV-702 and BMV-712).

Please install the BMV in accordance with the quick installation guide.

After inserting the fuse in the positive supply cable to the main battery, the BMV will automatically start the setup wizard.

The setup wizard below must be completed before other settings can be made. **Alternatively, use the VictronConnect app and a smart phone.**

Remarks:

a) In case of **solar applications** or **Li-ion batteries** several settings may have to be changed. Please refer to section 2.3 resp. section 6. The setup wizard below must be completed before other settings can be made.

b) When using a **shunt** other than the one supplied with the BMV, please refer to section 3.6. The setup wizard below must be completed before other settings can be made.

c) **Bluetooth**

Use a Bluetooth Smart enabled device (smart phone or tablet) for easy and fast initial setup, for changing settings and for real time monitoring.

**BMV-700 or -702:** VE.Direct Bluetooth Smart dongle needed.

**BMV-712 Smart:** Bluetooth enabled, no dongle needed. Ultra low current draw.

## Bluetooth:

**VE.Direct Bluetooth Smart dongle:** see the manual on our website [https://www.victronenergy.com/live/ve.direct:ve.direct\\_to\\_bluetooth\\_smart\\_dongle](https://www.victronenergy.com/live/ve.direct:ve.direct_to_bluetooth_smart_dongle)


## BMV-712 Smart:

Download the VictronConnect app (see Downloads on our website) <https://www.victronenergy.com/live/victronconnect:start>

Pairing procedure: the default PIN code is 000000

After connecting, the PIN code can be changed by pressing the (i) button in the top right of the app.

If the dongle PIN code is lost, reset it to 000000 by pressing and holding the clear PIN button until the solid blue colored Bluetooth light flashes off and on momentarily.

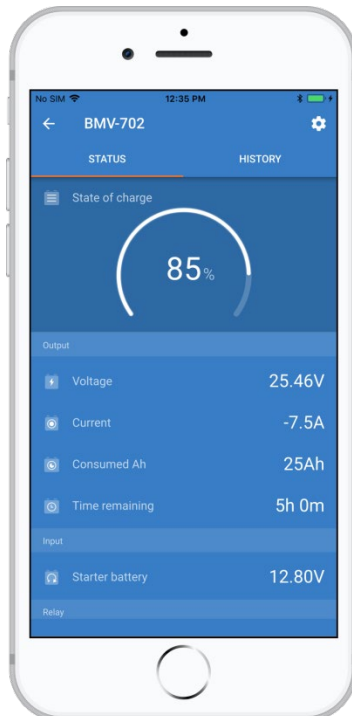

**Setup wizard** (alternatively, use the VictronConnect app and smart phone):

## 1.1 Battery capacity (preferably use the 20 hour capacity rating (C<sub>20</sub>))

a) After inserting the fuse the display will show the scrolling text

**01 BATTERY CAPACITY**

*If this text is not shown, press SETUP and SELECT simultaneously during 3 seconds to restore factory settings or go to section 4 for full setup details (setting 64, Lock setup, must be OFF to restore factory settings, see section 4.2.5).*

b) Press any button to stop scrolling and the factory default value **0200 Ah** will appear in edit mode: the first digit will blink.

Enter the desired value with the + and – buttons.

c) Press SELECT to set the next digit in the same manner.

Repeat this procedure until the required battery capacity is displayed.

The capacity is automatically stored in non-volatile memory when the last digit has been set by pressing SELECT. This is indicated with a short beep.

*If a correction has to be made, press SELECT again and repeat the procedure.*

d) BMV-700 and 700H: press SETUP or + or – to end the setup wizard and switch to normal operating mode.

BMV-702: press SETUP or + or – to proceed to auxiliary input setting.

## 1.2 Auxiliary input (BMV-702 and -712 only)

a) The display will show **AUXILIARY INPUT** scrolling.

b) Press SELECT to stop scrolling and the LCD will show: **START**

Use the + or – key to select the required function of the auxiliary input:

**START** for monitoring the starter battery voltage.

**MID** for monitoring the midpoint voltage of a battery bank.

**TEMP** for using the optional temperature sensor

Press SELECT to confirm. Confirmation is indicated with a short beep.

c) Press SETUP or + or – to end the setup wizard and switch to normal operating mode.

## **The BMV is now ready for use.**

*When powered up for the first time, the BMV will by default display 100% state of charge. See section 4.2.1, setting 70 to change this this behaviour.*

*When in normal mode the backlight of the BMV switches off after no key has been pressed for 60 seconds. Press any key to restore backlight.*

*The cable with integrated temperature sensor has to be purchased separately (part no: ASS000100000). This temperature sensor is not interchangeable with other Victron temperature sensors, as used with Multis/Quattros or battery chargers.*

### **1.3 Important combined button functions**

(see also section 4.1: using the menus)

#### a) Restore factory settings

Press and hold SETUP and SELECT simultaneously for 3 seconds

#### b) Manual synchronisation

Press and hold the up and down buttons simultaneously for 3 seconds

#### c) Silence audible alarm

An alarm is acknowledged when any button is pressed. However, the alarm icon is displayed as long as the alarm condition remains.

### **1.4 Realtime data displayed on a smartphone**

With the VE.Direct Bluetooth Smart dongle realtime data and alarms can be displayed on Apple and Android smartphones, tablets and other devices.

#### *Note:*

*A VE.Direct Bluetooth Smart dongle is not required for BMV-712, since it has Bluetooth built-in.*


## 2 NORMAL OPERATING MODE

### 2.1 Readout overview

In normal operating mode the BMV displays an overview of important parameters.

The + and – selection buttons give access to various readouts:

#### Battery voltage



#### Auxiliary battery voltage




**BMV-702 and -712 only**, when the auxiliary input is set to START.

#### Current



The actual current flowing out of the battery (negative sign) or into the battery (no sign).

#### Power



The power drawn from the battery (negative sign) or flowing into the battery (no sign).

### Consumed Amp-hours



The amount of Ah consumed from the battery

#### *Example:*

*If a current of 12A is drawn from a fully charged battery for a period of 3 hours, this readout will show -36.0Ah.*

*(-12 x 3 = -36)*

#### *Note:*

*Three dashes '---' will be shown when the BMV is started in unsynchronised state. See section 4.2.1, setting number 70.*

### State of charge



A fully charged battery will be indicated by a value of 100.0%. A fully discharged battery will be indicated by a value of 0.0%.

#### *Note:*

*Three dashes '---' will be shown when the BMV is started in unsynchronised state. See section 4.2.1, setting number 70.*

### Time-to-go



An estimation of how long the battery can support the present load until it needs recharging.

*The time-to-go displayed is the time to reach the discharge floor. See 4.2.2, setting number 16.*

#### *Note:*

*Three dashes '---' will be shown when the BMV is started in unsynchronised state. See section 4.2.1, setting number 70.*

### Battery temperature



**BMV-702 and -712 only**, when the auxiliary input is set to TEMP.

*The value can be displayed in degrees Celsius or degrees Fahrenheit. See section 4.2.5.*

### Battery bank top section voltage



**BMV-702 and -712 only**, when the auxiliary input set to MID.

*Compare with the bottom section voltage to check battery balancing. For more about battery midpoint monitoring, see section 5.2.*

### Battery bank bottom section voltage



**BMV-702 and -712 only**, when the auxiliary input is set to MID.

*Compare with the top section voltage to check battery balancing.*


### Battery bank midpoint deviation



**BMV-702 and -712 only**, when the auxiliary input is set to MID.

*Deviation in percent of the measured midpoint voltage.*

### Battery bank midpoint deviation voltage



**BMV-702 and -712 only**, when the auxiliary input is set to MID.

*Deviation in Volts of the midpoint voltage.*

## 2.2 Synchronising the BMV

For a reliable readout, the state of charge as displayed by the battery monitor has to be synchronised regularly with the true state of charge of the battery. This is accomplished by fully charging the battery. In case of a 12V battery, the BMV resets to 'fully charged' when the following 'charged parameters' are met: the voltage exceeds 13.2V and simultaneously the (tail-) charge current is less than 4.0% of the total battery capacity (e.g. 8A for a 200Ah battery) during 3 minutes.

The BMV can also be synchronised (i.e. set to 'battery fully charged') manually if required. This can be achieved in normal operating mode by holding the + and – buttons simultaneously for 3 seconds, or in setup mode by using the SYNC option (see *section 4.2.1, setting number 10*).

By default, the BMV is configured to start-up in a synchronised state and will indicate a state of charge of 100%. This behaviour can be changed: see *section 4.2.1, setting number 70*.

If the BMV does not synchronise automatically, the charged voltage, tail current, and/or charged time may need adjustment. When the voltage supply to the BMV has been interrupted, the battery monitor must be resynchronised before it can operate correctly.

After having synchronised for the first time (automatically or manually), the BMV keeps track of the number of automatic synchronisations: see *section 4.3, history item SYNCHRONISATIONS*.

## 2.3 Common problems

### No signs of life on the display

Probably the BMV is not properly wired. The UTP cable should be properly inserted at both ends, the shunt must be connected to the minus pole of the battery, and the positive supply cable should be connected to the plus pole of the battery with the fuse inserted.

*The temperature sensor (when used) must be connected to the positive pole of the battery bank (one of the two wires of the sensor doubles as the power supply wire).*

### Charge and discharge current are inverted

Charge current should be shown as a positive value.

*For example: 1.45A.*

Discharge current should be shown as a negative value.

*For example: -1.45A.*

If charge and discharge current are inverted, the power cables on the shunt must be swapped: *see the quick installation guide.*

### The BMV does not synchronise automatically

One possibility is that the battery never reaches the fully charged state.

The other possibility is that the charged voltage setting should be lowered and/or the tail current setting should be increased.

*See section 4.2.1.*

### The BMV synchronises too early

In **solar systems** or other applications with fluctuating charge currents, the following measures can be taken to reduce the probability for the BMV to reset prematurely to 100% state of charge:

- a) *Increase the "charged" voltage to only slightly below the absorption charge voltage (for example: 14.2V in case of 14.4V absorption voltage).*
- b) *Increase the "charged" detection time and/or decrease the tail current to prevent an early reset due to passing clouds.*

*See section 4.2.1 for set up instructions.*

### Sync and battery icon are blinking

This means the battery is not synchronised. Charge the batteries and the BMV should sync automatically. If that doesn't work, review the sync settings. Or, if you know the battery is fully charged but don't want to wait until the BMV synchronises: press and hold the up and down button simultaneously, until you hear a beep.

*See section 4.2.1.*

## 3 FEATURES AND FUNCTIONALITY

### 3.1 Features of the four BMV models

The BMV is available in 4 models, each of which addresses a different set of requirements.

		BMV-700	BMV-700H	BMV-702 and 712
1	Comprehensive monitoring of a single battery	•	•	•
2	Basic monitoring of an auxiliary battery			•
3	Battery temperature monitoring			•
4	Monitoring of the midpoint voltage of a battery bank			•
5	Use of alternate shunts	•	•	•
6	Automatic detection of nominal system voltage	•	•	•
7	Suitable for high voltage systems		•	
8	Several interface options	•	•	•

*Remark 1:  
Features 2, 3 and 4 are mutually exclusive.*

*Remark 2:  
The cable with integrated temperature sensor has to be purchased separately (part no: ASS000100000). This temperature sensor is not interchangeable with other Victron temperature sensors, as used with Multis or battery chargers.*

### 3.2 Why should I monitor my battery?

Batteries are used in a wide variety of applications, mostly to store energy for later use. But how much energy is stored in the battery? No one can tell by just looking at it.

The service life of batteries depends on many factors. Battery life may be shortened by undercharging, overcharging, excessively deep discharges, excessive charge or discharge current, and high ambient temperature. By monitoring the battery with an advanced battery monitor, important feedback is given to the user so that remedial measures can be taken when necessary. Doing this, which extends battery life, the BMV will quickly pay for itself.

### 3.3 How does the BMV work?

The main function of the BMV is to follow and indicate the state of charge of a battery, in particular to prevent unexpected total discharge.

The BMV continuously measures the current flow in and out of the battery. Integration of this current over time (which, if the current is a fixed amount of Amps, boils down to multiplying current and time) gives the net amount of Ah added or removed.

*For example: a discharge current of 10A during 2 hours will take  $10 \times 2 = 20\text{Ah}$  from the battery.*

To complicate matters, the effective capacity of a battery depends on the rate of discharge and, to a lesser extent, on temperature.

And to make things even more complicated: when charging a battery more Ah has to be 'pumped' into the battery than can be retrieved during the next discharge. In other words: the charge efficiency is less than 100%.

#### 3.3.1 About battery capacity and the rate of discharge

The capacity of a battery is rated in ampere-hours (Ah). For example, a lead acid battery that can deliver a current of 5A during 20 hours is rated at  $C_{20} = 100\text{Ah}$  ( $5 \times 20 = 100$ ).

When the same 100Ah battery is discharged completely in two hours, it may only give  $C_2 = 56\text{Ah}$  (because of the higher rate of discharge).

The BMV takes this phenomenon into account with Peukert's formula: see *section 5.1*.

### 3.3.2 About charge efficiency (CEF)

The charge efficiency of a lead acid battery is almost 100% as long as no gas generation takes place. Gassing means that part of the charge current is not transformed into chemical energy, which is stored in the plates of the battery, but is used to decompose water into oxygen and hydrogen gas (highly explosive!). The 'Amp-hours' stored in the plates can be retrieved during the next discharge, whereas the 'Amp-hours' used to decompose water are lost.

Gassing can easily be observed in flooded batteries. Please note that the 'oxygen only' end of charge phase of sealed (VRLA) gel and AGM batteries also results in a reduced charge efficiency.

A charge efficiency of 95% means that 10Ah must be transferred to the battery to get 9.5Ah actually stored in the battery. The charge efficiency of a battery depends on battery type, age and usage.

The BMV takes this phenomenon into account with the charge efficiency factor: see section 4.2.2, setting number 06.

## 3.4 Several battery state of charge display options

The BMV can display both the Amp-hours removed ('consumed Amp-hours' readout, compensated for charge efficiency only) and the actual state of charge in percent ('state of charge' readout, compensated for charge efficiency and Peukert efficiency). Reading the state of charge is the best way to monitor the battery.

The BMV also estimates how long the battery can support the present load: the 'time-to-go' readout. This is the actual time left until the battery is discharged to the discharge floor. The factory discharge floor setting is 50% (see 4.2.2, setting number 16).

If the load is fluctuating heavily it is best not to rely on this reading too much since it is a momentary readout and must be used as a guideline only. We always encourage the use of the state of charge readout for accurate battery monitoring. The battery state of charge indicator (see chapter 7 "*Display*") scales between the configured discharge floor and 100% state of charge and reflects the effective state of charge.

## 3.5 History data

The BMV stores events which can be used at a later date to evaluate usage patterns and battery health.

Select the history data menu by pressing ENTER when in normal mode (see section 4.3).

### 3.6 Use of alternative shunts

The BMV is supplied with a 500A / 50mV shunt. For most applications, this should be suitable; however the BMV can be configured to work with a wide range of different shunts. Shunts of up to 9999A, and/or 75mV can be used.

When using a shunt other than the one supplied with the BMV, please proceed as follows:

1. Unscrew the PCB from the supplied shunt.
2. Mount the PCB on the new shunt, ensuring that there is good electrical contact between the PCB and the shunt.
3. Connect the shunt and BMV as shown in the quick installation guide.
4. Follow the Setup wizard (section 1.1 and 1.2).
5. After completion of the Setup wizard, set the proper shunt current and shunt voltage according to section 4.2.5, setting number 65 and 66.
6. If the BMV reads a non-zero current even when there is no load and the battery is not being charged: calibrate the zero current reading (see section 4.2.1, setting number 09).

### 3.7 Automatic detection of nominal system voltage

The BMV will automatically adjust itself to the nominal voltage of the battery bank, immediately after completion of the setup wizard. The following table shows how the nominal voltage is determined, and how the charged voltage parameter (see section 2.2) is adjusted as a result.

	Measured voltage (V)	Assumed nominal voltage (V)	Charged voltage (V)
<b>BMV-700 &amp; 702 &amp; 712</b>	< 18	12	13.2
	18 – 36	24	26.4
	> 36	48	52.8
<b>BMV-700H</b>	Default nominal voltage: 144V		Default: 158.4V

*In case of another nominal battery bank voltage (32V for example), the charged voltage must be set manually: see section 4.2.1, setting 02.*

*Recommended settings:*

<i>Nominal battery voltage</i>	<i>Recommended Charged Voltage setting</i>
12V	13.2V
24V	26.4V
36V	39.6V
48V	52.8V
60V	66V
120V	132V
144V	158.4V
288V	316.8V

### **3.8 Alarm, buzzer and relay:**

On most of the BMV's readings an alarm can be triggered when the value reaches a set threshold. When the alarm becomes active the buzzer starts to beep, the backlight flashes and the alarm icon is visible in the display along with the current value.

The corresponding segment will also flash. *AUX when a starter alarm occurs. MAIN, MID or TEMP for the corresponding alarm.*

(When in the setup menu and an alarm occurs, the value causing the alarm will not be visible.)

An alarm is acknowledged when a button is pressed. However, the alarm icon is displayed as long as the alarm condition remains.

It is also possible to trigger the relay when an alarm condition occurs.

#### **BMV-700 and -702**

*The relay contact is open when the coil is de-energised (NO contact), and will close when the relay is energised.*

*Factory default setting: the relay is controlled by the state of charge of the battery bank. The relay will be energised when the state of charge decreases to less than 50% (the 'discharge floor'), and will be de-energised when the battery has been recharged to 90% state of charge. See section 4.2.2.*

*The relay function can be inverted: de-energised becomes energised and vice versa. See section 4.2.2.*

When the relay is energised, the current drawn by the BMV will increase slightly: see technical data.

## BMV-712 Smart

The BMV-712 has been designed to minimize power consumption. The alarm relay therefore is a bistable relay, and the current draw remains low whatever the position of the relay.

### 3.9 Interface options

#### 3.9.1 PC Software

Connect the BMV to the computer with the VE.Direct to USB interface cable (ASS030530000) and download the appropriate software.

<https://www.victronenergy.com/live/victronconnect:start>

#### 3.9.2 Large display and remote monitoring

The Color Control GX, a display featuring a 4.3" colour display, provides intuitive control and monitoring for all products connected to it. The list of Victron products that can be connected is endless: Inverters, Multis, Quattros, MPPT solar chargers, BMV, Skylla-i, Lynx Ion and more. The BMV can be connected to the Color Control GX with a VE.Direct cable. It is also possible to connect it with the VE.Direct to USB interface. Besides monitoring and controlling locally with the Color Control GX, the information is also forwarded to our free remote monitoring website: the [VRM Online Portal](#). For more information, see the Color Control GX documentation on our website.

#### 3.9.3 Custom integration (programming required)

The VE.Direct communications port can be used to read data and change settings. The VE.Direct protocol is extremely simple to implement. Transmitting data to the BMV is not necessary for simple applications: the BMV automatically sends all readings every second. All the details are explained in this document:

[https://www.victronenergy.com/upload/documents/Whitepaper-Data-communication-with-Victron-Energy-products\\_EN.pdf](https://www.victronenergy.com/upload/documents/Whitepaper-Data-communication-with-Victron-Energy-products_EN.pdf)

### 3.10 Additional functionality of the BMV-702 and -712

In addition to the comprehensive monitoring of the main battery system, the **BMV-702 and -712** have a second monitoring input. This secondary input has three configurable options, described below.

#### 3.10.1 Auxiliary battery monitoring

*Wiring diagram: see the quick installation guide. Fig 3*

This configuration provides basic monitoring of a second battery, displaying its voltage. This is useful for systems with a separate starter battery.

#### 3.10.2 Battery temperature monitoring

*Wiring diagram: see the quick installation guide. Fig 4*

The cable with integrated temperature sensor has to be purchased separately (part no: ASS000100000). This temperature sensor is not interchangeable with other Victron temperature sensors, as provided with Multis or battery chargers. The temperature sensor must be connected to the positive pole of the battery bank (one of the two wires of the sensor doubles as the power supply wire).

The temperature can be displayed in degrees Celsius or degrees Fahrenheit, see section 4.2.5, setting number 67.

The temperature measurement can also be used to adjust battery capacity to temperature, see section 4.2.5, setting number 68.

The available battery capacity decreases with temperature.

Typically, the reduction, compared to the capacity at 20°C, is 18% at 0°C and 40% at -20°C.

#### 3.10.3 Midpoint voltage monitoring

*Wiring diagram: see the quick installation guide. Fig 5 - 12*

One bad cell or one bad battery can destroy a large, expensive battery bank.

A short circuit or high internal leakage current in one cell for example will result in under charge of that cell and over charge of the other cells.

Similarly, one bad battery in a 24V or 48V bank of several series/parallel connected 12V batteries can destroy the whole bank.

Moreover, when cells or batteries are connected in series, they should all have the same initial state of charge. Small differences will be ironed out during absorption or equalise charging, but large differences will result in damage during charging due to excessive gassing of the cells or batteries with the highest initial state of charge.

A timely alarm can be generated by monitoring the midpoint of the battery bank. For more information, see section 5.1.

### 3.11 Additional functionality of the BMV-712 Smart

#### 3.11.1 *Automatic cycling through status items*

The BMV-712 can be instructed to automatically cycle through the status items by keeping the minus button pressed for 3 seconds. This enables one to keep an eye on their system's status without the need to operate the BMV-712. Automatic cycling through status items is disabled again by pressing any of the buttons.

#### 3.11.2 *Turning Bluetooth On/Off*

The BMV-712's on-board Bluetooth module can be turned on or off through the settings menu. See section 4.2.1, setting 71.

## 4 FULL SETUP DETAILS

### 4.1 Using the menus (alternatively, use the VictronConnect app and smart phone)

Four buttons control the BMV. The function of the buttons depends on which mode the BMV is in.

Button	Function	
	When in normal mode	When in setup mode
<b>If backlight is off, press any button to restore backlight</b>		
SETUP	Press and hold for two seconds to switch to setup mode. The display will scroll the number and description of the selected parameter.	Press SETUP at any time to return to the scrolling text, and press again to return to normal mode. <i>When pressing SETUP while a parameter is out of range, the display blinks 5 times and the nearest valid value is displayed.</i>
SELECT	Press to switch to history menu. Press to stop scrolling and show the value. Press again to switch back to normal mode.	<ul style="list-style-type: none"> <li>- Press to stop scrolling after entering the setup mode with the SETUP button.</li> <li>- After editing the last digit, press to end editing. The value is stored automatically. Confirmation is indicated by a short beep.</li> <li>- If required, press again to restart editing.</li> </ul>
SETUP/ SELECT	Press and hold both SETUP and SELECT buttons simultaneously for three seconds to restore factory settings (disabled when setting 64, lock setup, is on, see section 4.2.5)	
+	Move upwards	When not editing, press to move up to the previous parameter. When editing, this button will increment the value of the selected digit.
-	Move downwards	When not editing, press to move down to the next parameter. When editing, this button will decrement the value of the selected digit.
	<b>BMV-712 only:</b> Press and hold for three seconds (until the confirmation beep) to start automatic cycling through status items.	
+/-	Press and hold both buttons simultaneously for three seconds to manually synchronise the BMV	

When power is applied for the first time or when factory settings have been restored, the BMV will start the quick setup wizard: see section 1. Thereafter, if power is applied, the BMV will start in normal mode: see section 2.

## 4.2 Functions overview

The following summary describes all the parameters of the BMV.

- Press SETUP for two seconds to access these functions and use the + and – buttons to browse them.
- Press SELECT to access the desired parameter.
- Use SELECT and the + and – buttons to customize. A short beep confirms the setting.
- Press SETUP at any time to return to the scrolling text, and press again to return to normal mode.

### 4.2.1 Battery settings

---

#### 01. Battery capacity

Battery capacity in amp hours

Default	Range	Step size
200Ah	1 – 9999Ah	1Ah

---

#### 02. Charged voltage

The battery voltage must be above this voltage level to consider the battery as fully charged.

*The charged-voltage-parameter should always be slightly below the end of charge voltage of the charger (usually 0.2V or 0.3V below the 'float' voltage of the charger).*

*See section 3.7 for recommended settings.*

#### BMV-700 / BMV-702 / BMV-712 Smart

Default	Range	Step size
See table, sect 3.7	0 – 95V	0.1V

#### BMV-700H

Default	Range	Step size
158.4V	0 – 384V	0.1V

---

#### 03. Tail current

Once the charge current has dropped to less than the set tail current (expressed as percentage of the battery capacity), the battery is considered as fully charged.

*Remark:*

*Some battery chargers stop charging when the current drops below a set threshold. The tail current must be set higher than this threshold.*

Default	Range	Step size
4%	0.5 – 10%	0.1%

#### 04. Charged detection time

This is the time the charged-parameters (**Charged voltage** and **Tail current**) must be met in order to consider the battery fully charged.

<b>Default</b>	<b>Range</b>	<b>Step size</b>
3 minutes	1 – 50 minutes	1 minute

---

#### 05. Peukert exponent

When unknown it is recommended to keep this value at 1.25 (default) for lead acid batteries and change to 1.05 for Li-ion batteries. A value of 1.00 disables the Peukert compensation.

<b>Default</b>	<b>Range</b>	<b>Step size</b>
1.25	1 – 1.5	0.01

---

#### 06. Charge Efficiency Factor

The Charge Efficiency Factor compensates for the Ah losses during charging. 100% means no loss.

<b>Default</b>	<b>Range</b>	<b>Step size</b>
95%	50 – 100%	1%

---

#### 07. Current threshold

When the current measured falls below this value it will be considered zero.

*The current threshold is used to cancel out very small currents that can negatively affect the long term state of charge readout in noisy environments. For example if the actual long term current is 0.0A and due to injected noise or small offsets the battery monitor measures -0.05A, and in the long term the BMV can incorrectly indicate that the battery needs recharging. When the current threshold in this example is set to 0.1A, the BMV calculates with 0.0A so that errors are eliminated.*

*A value of 0.0A disables this function.*

<b>Default</b>	<b>Range</b>	<b>Step size</b>
0.1A	0 – 2A	0.01A

---

#### 08. Time-to-go averaging period

Specifies the time window (in minutes) that the moving averaging filter works.

*A value of 0 disables the filter and gives an instantaneous (real-time) readout; however the displayed value may fluctuate heavily. Selecting the longest time (12 minutes) ensures that only long term load fluctuations are included in the time-to-go calculations.*

<b>Default</b>	<b>Range</b>	<b>Step size</b>
3 minutes	0 – 12 minutes	1 minute

---

#### 09. Zero current calibration

If the BMV reads a non-zero current even when there is no load and the battery is not being charged, this option can be used to calibrate the zero reading.

Ensure that there really is no current flowing into or out of the battery (disconnect the cable between the load and the shunt), then press SELECT.

---

#### 10. Synchronise

This option can be used to manually synchronise the BMV.

Press SELECT to synchronise.

*The BMV can also be synchronised when in normal operating mode by holding the + and – buttons simultaneously for 3 seconds.*

## 4.2.2 Relay settings

Remark: thresholds are disabled when set at 0

---

### 11. Relay mode

**DFLT** Default mode. The relay thresholds Nos. 16 up to 31 can be used to control the relay.

**CHRG** Charger mode. The relay will close when the state of charge falls below setting 16 (discharge floor) **or** when the battery voltage falls below setting 18 (low voltage relay). The relay will be open when the state of charge is higher than setting 17 (clear state of charge relay) **and** the battery voltage is higher than setting 19 (clear low voltage relay).

*Application example: start and stop control of a generator, together with settings 14 and 15.*

**REM** Remote mode. The relay can be controlled via the VE.Direct interface. Relay settings 12 and 14 up to 31 are ignored as the relay is under the full control of the device connected via the VE.Direct interface.

---

### 12. Invert relay

This function enables selection between a normally de-energised (contact open) or a normally energised (contact closed) relay. When inverted, the open and closed conditions as described in setting 11 (DFLT and CHRG), and settings 14 up to 31 are inverted.

*The normally energised setting will slightly increase supply current in the normal operating mode.*

#### Default

OFF: Normally de-energised

#### Range

OFF: Normally de-energised / ON: normally energised

---

### 13. Relay state (read only)

Displays whether the relay is open or closed (de-energised or energised).

#### Range

OPEN/CLSD

---

### 14. Relay minimum closed time

Sets the minimum amount of time that the CLOSED condition will remain present after the relay has been energised. (changes to OPEN and de-energised if the relay function has been inverted)

*Application example: set a minimum generator run time (relay in CHRG mode).*

### 15. Relay-off delay

Sets the amount of time the 'de-energise relay' condition must be present before the relay opens.

*Application example: keep a generator running for a while to better charge the battery (relay in CHRG mode).*

#### Default

0 minutes

#### Range

0 – 500 minutes

#### Step size

1 minute

---

### 16. SOC relay (Discharge floor)

When the state of charge percentage has fallen below this value, the relay will close.

*The time-to-go displayed is the time to reach the discharge floor.*

#### Default

50%

#### Range

0 – 99%

#### Step size

1%

### 17. Clear SOC relay

When the state of charge percentage has risen above this value, the relay will open (after a delay, depending on setting 14 and/or 15). This value needs to be greater than the previous parameter setting. When the value is equal to the previous parameter the state of charge percentage will not close the relay.

<b>Default</b>	<b>Range</b>	<b>Step size</b>
90%	0 – 99%	1%

---

### 18. Low voltage relay

When the battery voltage falls below this value for more than 10 seconds the relay will close.

### 19. Clear low voltage relay

When the battery voltage rises above this value, the relay will open (after a delay, depending on setting 14 and/or 15). This value needs to be greater than or equal to the previous parameter.

### 20. High voltage relay

When the battery voltage rises above this value for more than 10 seconds the relay will close.

### 21. Clear high voltage relay

When the battery voltage falls below this value, the relay will open (after a delay, depending on setting 14 and/or 15). This value needs to be less than or equal to the previous parameter.

#### **BMV-700 / BMV-702 / BMV 712 Smart**

<b>Default</b>	<b>Range</b>	<b>Step size</b>
0V	0 – 95V	0.1V

#### **BMV-700H**

<b>Default</b>	<b>Range</b>	<b>Step size</b>
0V	0 – 384V	0.1V

---

### 22. Low starter voltage relay -702 and -712 only

When the auxiliary (e.g. starter battery) voltage falls below this value for more than 10 seconds the relay will be activated.

### 23. Clear low starter voltage relay -702 and -712 only

When the auxiliary voltage rises above this value, the relay will open (after a delay, depending on setting 14 and/or 15). This value needs to be greater than or equal to the previous parameter.

### 24. High starter voltage relay -702 and -712 only

When the auxiliary (e.g. starter battery) voltage rises above this value for more than 10 seconds, the relay will be activated.

### 25. Clear high starter voltage relay -702 and -712 only

When the auxiliary voltage falls below this value, the relay will open (after a delay, depending on setting 14 and/or 15). This value needs to be less than or equal to the previous parameter.

Default	Range	Step size
0V	0 – 95V	0.1V

---

### 26. High temperature relay -702 and -712 only

When the battery temperature rises above this value for more than 10 seconds, the relay will be activated.

### 27. Clear high temperature relay -702 and -712 only

When the temperature falls below this value, the relay will open (after a delay, depending on setting 14 and/or 15). This value needs to be less than or equal to the previous parameter.

### 28. Low temperature relay -702 and -712 only

When the temperature falls below this value for more than 10 seconds, the relay will be activated.

### 29. Clear low temperature relay -702 and -712 only

When the temperature rises above this value, the relay will open (after a delay, depending on setting 14 and/or 15). This value needs to be greater than or equal to the previous parameter. See *setting 67 for choosing between °C and °F*.

Default	Range	Step size
0°C	-99 – 99°C	1°C
0°F	-146 – 210°F	1°F

---

### 30. Mid voltage relay -702 and -712 only

When the midpoint voltage deviation rises above this value for more than 10 seconds, the relay will be activated. See *section 5.2 for more information about the midpoint voltage*.

### 31. Clear mid voltage relay -702 and -712 only

When the midpoint voltage deviation falls below this value, the relay will open (after a delay, depending on setting 14 and/or 15). This value needs to be less than or equal to the previous parameter.

Default	Range	Step size
0%	0 – 99%	0.1%

### 4.2.3 Alarm-Buzzer settings

Remark: thresholds are disabled when set at 0

---

#### 32. Alarm buzzer

When set, the buzzer will sound an alarm. After a button is pressed the buzzer will stop sounding. When disabled the buzzer will not sound an alarm.

<b>Default</b>	<b>Range</b>
ON	ON/OFF

---

#### 33. Low SOC alarm

When the state of charge falls below this value for more than 10 seconds the low SOC alarm is turned on. This is a visual and audible alarm. It does not energise the relay.

#### 34. Clear low SOC alarm

When the state of charge rises above this value, the alarm is turned off. This value needs to be greater than or equal to the previous parameter.

<b>Default</b>	<b>Range</b>	<b>Step size</b>
0%	0 – 99%	1%

---

#### 35. Low voltage alarm

When the battery voltage falls below this value for more than 10 seconds the low voltage alarm is turned on. This is a visual and audible alarm. It does not energise the relay.

#### 36. Clear low voltage alarm

When the battery voltage rises above this value, the alarm is turned off. This value needs to be greater than or equal to the previous parameter.

**37. High voltage alarm** - When the battery voltage rises above this value for more than 10 seconds the high voltage alarm is turned on. This is a visual and audible alarm. It does not energise the relay.

**38. Clear high voltage alarm** - When the battery voltage falls below this value, the alarm is turned off. This value needs to be less than or equal to the previous parameter.

#### BMV-700 / BMV-702 / BMV-712 Smart

<b>Default</b>	<b>Range</b>	<b>Step size</b>
0V	0 – 95V	0.1V

#### BMV-700H

<b>Default</b>	<b>Range</b>	<b>Step size</b>
0V	0 – 384V	0.1V

---

#### 39. Low starter voltage alarm -702 and -712 only

When the auxiliary (e.g. starter battery) voltage falls below this value for more than 10 seconds the alarm will be activated. This is a visual and audible alarm. It does not energise the relay.

**40. Clear low starter voltage alarm -702 and -712 only**

When the auxiliary voltage rises above this value, the alarm is switched off. This value needs to be greater than or equal to the previous parameter.

**41. High starter voltage alarm -702 and -712 only**

When the auxiliary (e.g. starter battery) voltage rises above this value for more than 10 seconds, the alarm will be activated. This is a visual and audible alarm. It does not energise the relay.

**42. Clear high starter voltage alarm -702 and -712 only**

When the auxiliary voltage falls below this value, the alarm is switched off. This value needs to be less than or equal to the previous parameter.

Default	Range	Step size
0V	0 – 95V	0.1V

**43. High temperature alarm -702 and -712 only**

When the battery temperature rises above this value for more than 10 seconds, the alarm will be activated. This is a visual and audible alarm. It does not energise the relay.

**44. Clear high temperature alarm -702 and -712 only**

When the temperature falls below this value, the alarm is switched off. This value needs to be less than or equal to the previous parameter.

**45. Low temperature alarm -702 and -712 only**

When the temperature falls below this value for more than 10 seconds, the alarm will be activated. This is a visual and audible alarm. It does not energise the relay.

**46. Clear low temperature alarm -702 and -712 only**

When the temperature rises above this value, the alarm is switched off. This value needs to be greater than or equal to the previous parameter.  
See parameter 67 for choosing between °C and °F.

Default	Range	Step size
0°C	-99 – 99°C	1°C
0°F	-146 – 210°F	1°F

#### 47. Mid voltage alarm -702 and -712 only

When the midpoint voltage deviation rises above this value for more than 10 seconds, the alarm will be activated. This is a visual and audible alarm. It does not energise the relay. See section 5.2 for more information about midpoint voltage.

Default	Range	Step size
2%	0 – 99%	0.1%

---

#### 48. Clear mid voltage alarm -702 and -712 only

When the midpoint voltage deviation falls below this value, the alarm is switched off. This value needs to be less than or equal to the previous parameter.

Default	Range	Step size
1.5%	0 – 99%	0.1%

---

### 4.2.4 Display settings

---

#### 49. Backlight intensity

The intensity of the backlight, ranging from 0 (always off) to 9 (maximum intensity)

Default	Range	Step size
5	0 – 9	1

---

#### 50. Backlight always on

When set the backlight will not automatically turn off after 60 seconds of inactivity.

Default	Range
OFF	OFF/ON

---

#### 51. Scroll speed

The scroll speed of the display, ranging from 1 (very slow) to 5 (very fast).

Default	Range	Step size
2	1 – 5	1

---

#### 52. Main voltage display

Must be ON to display the voltage of the main battery in the monitoring menu.

#### 53. Current display

Must be ON to display current in the monitoring menu.

#### 54. Power display

Must be ON to display power in the monitoring menu.

#### 55. Consumed Ah display

Must be ON to display consumed Ah in the monitoring menu.

#### 56. State of charge display

Must be ON to display state of charge in the monitoring menu.

**57. Time-to-go display**

Must be ON to display time-to-go in the monitoring menu.

**58 Starter voltage display -702 and -712 only**

Must be ON to display the auxiliary voltage in the monitoring menu.

**59. Temperature display -702 and -712 only**

Must be ON to display the temperature in the monitoring menu.

**60. Mid-voltage display -702 and -712 only**

Must be ON to display the midpoint voltage in the monitoring menu.

**Default**

ON

**Range**

ON/OFF

**4.2.5 Miscellaneous****61. Software version (read only)**

The software version of the BMV

**62. Restore defaults**

Resets all settings to factory default by pressing SELECT.

*When in normal operating mode, factory settings can be restored by pressing SETUP and SELECT simultaneously for 3 seconds (only if setting 64, Lock setup, is off).*

**63. Clear history**

Clears all history data by pressing SELECT.

**64. Lock setup**

When on, all settings (except this one) are locked and cannot be altered.

**Default**

OFF

**Range**

OFF/ON

**65. Shunt current**

When using a shunt other than the one supplied with the BMV, set to the rated current of the shunt.

**Default**

500A

**Range**

1 – 9999A

**Step size**

1A

**66. Shunt voltage**

When using a shunt other than the one supplied with the BMV, set to the rated voltage of the shunt.

**Default**

50mV

**Range**

1mV– 75mV

**Step size**

1mV

## 67. Temperature unit

**CELC** Displays the temperature in °C.

**FAHR** Displays the temperature in °F.

<b>Default</b>	<b>Range</b>
CELC	CELC/FAHR

---

## 68. Temperature coefficient

This is the percentage the battery capacity changes with temperature, when temperature decreases to less than 20°C (above 20°C the influence of temperature on capacity is relatively low and is not taken into account). The unit of this value is “%cap/°C” or percent capacity per degree Celsius. The typical value (below 20°C) is 1%cap/°C for lead acid batteries, and 0.5%cap/°C for Lithium Iron Phosphate batteries.

<b>Default</b>	<b>Range</b>	<b>Step size</b>
0%cap/°C	0 – 2%cap/°C	0.1%cap/°C

---

## 69. Aux input

Sets the function of the auxiliary input:

**START** Auxiliary voltage, e.g. a starter battery.

**MID** Midpoint voltage.

**TEMP** Battery temperature.

*The cable with integrated temperature sensor has to be purchased separately (part no: ASS000100000). This temperature sensor is not interchangeable with other Victron temperature sensors, as provided with Multis or battery chargers.*

---

## 70. Start synchronised

When ON, the BMV will consider itself synchronised when powered-up, resulting in a state of charge of 100%. If set to OFF, the BMV will consider it unsynchronised when powered-up, resulting in a state of charge that is unknown until the first actual synchronisation.

<b>Default</b>	<b>Range</b>
ON	OFF/ON

---

## 71. Bluetooth mode (BMV-712 only)

Determines whether to enable Bluetooth. If turned OFF using the VictronConnect app, the Bluetooth functionality is not disabled until disconnected from the BMV. Note that this setting is only available when the firmware of the on-board Bluetooth module supports this functionality.

<b>Default</b>	<b>Range</b>
ON	OFF/ON

### 4.3 History data

The BMV tracks several parameters regarding the state of the battery which can be used to evaluate usage patterns and battery health.

Enter history data by pressing the SELECT button when in normal mode.

Press + or – to browse the various parameters.

Press SELECT again to stop scrolling and show the value.

Press + or – to browse the various values.

Press SELECT again to leave the historical menu and go back to normal operation mode.

**The history data is stored in non-volatile memory, and will not be lost when the power supply to the BMV is interrupted.**

Parameter	Description
A DEEPEST dI SCHARGE	The deepest discharge in Ah.
b LAST dI SCHARGE	The largest value recorded for Ah consumed since the last synchronisation.
C AVERAGE dI SCHARGE	Average discharge depth
d CYCLES	The number of charge cycles. A charge cycle is counted every time the state of charge drops below 65%, then rises above 90%
E dI SCHARGES	The number of full discharges. A full discharge is counted when the state of charge reaches 0%.
F CUMULATIVE dE AH	The cumulative number of Amp hours drawn from the battery.
g LOWEST vOLTAGE	The lowest battery voltage.
H HI GHEST vOLTAGE	The highest battery voltage.
I DAY\$ SI NCE LAST CHARGE	The number of days since the last full charge.
J SYNCHRONI ZATI ON\$	The number of automatic synchronisations. A synchronisation is counted every time the state of charge drops below 90% before a synchronisation occurs.
L LOW vOLTAGE ALARMS	The number of low voltage alarms.
ñ HI GH vOLTAGE ALARMS	The number of high voltage alarms.
P LOWEST AUX vOLTAGE	The lowest auxiliary battery voltage.
q HI GHEST AUX vOLTAGE	The highest auxiliary battery voltage.
r dI SCHARGE d ENERgy	The total amount of energy drawn from the battery in (k)Wh
S CHARGE d ENERgy	The total amount of energy absorbed by the battery in (k)Wh

\* BMV-702 and 712 only

## 5 MORE ABOUT PEUKERT'S FORMULA AND MIDPOINT MONITORING

### 5.1 Peukert's formula: battery capacity and discharge rate

The value which can be adjusted in Peukert's formula is the exponent  $n$ : see the formula below.

In the BMV Peukert's exponent can be adjusted from 1.00 to 1.50. The higher the Peukert exponent the faster the effective capacity 'shrinks' with increasing discharge rate. An ideal (theoretical) battery has a Peukert Exponent of 1.00 and has a fixed capacity; regardless of the size of the discharge current. The default setting for the Peukert exponent is 1.25.

This is an acceptable average value for most lead acid batteries.

Peukert's equation is stated below:

$$C_p = I^n \cdot t \quad \text{where Peukert's exponent } n = \frac{\log t_2 - \log t_1}{\log I_1 - \log I_2}$$

The battery specifications needed for calculation of the Peukert exponent are the rated battery capacity (usually the 20 h discharge rate<sup>1</sup>) and for example a 5h discharge rate<sup>2</sup>. See below for an example of how to calculate the Peukert exponent using these two specifications.

5h rating

$$C_{5h} = 75 Ah$$

$$t_1 = 5h$$

$$I_1 = \frac{75 Ah}{5h} = 15 A$$

---

<sup>1</sup> Please note that the rated battery capacity can also be the 10h or even 5h discharge rate.

<sup>2</sup> The 5h discharge rate in this example is just arbitrary. Make sure that besides the C<sub>20</sub> rating (low discharge current) a second rating with a substantially higher discharge current is chosen.

20h rating  $C_{20h} = 100 Ah$  (rated capacity)

$$t_2 = 20h$$

$$I_2 = \frac{100 Ah}{20h} = 5 A$$

$$\text{Peukert exponent, } n = \frac{\log 20 - \log 5}{\log 15 - \log 5} = \underline{\underline{1.26}}$$

A Peukert calculator is available at

<http://www.victronenergy.com/support-and-downloads/software/>

Please note that Peukert's formula is no more than a rough approximation of reality, and that at very high currents, batteries will give even less capacity than predicted from a fixed exponent.

We recommend not to change the default value in the BMV, except in case of Li-ion batteries: See *section 6*.

## 5.2 Midpoint voltage monitoring

*Wiring diagram: see the quick installation sheet. Fig 5-12*

One bad cell or one bad battery can destroy a large, expensive battery bank.

A short circuit or high internal leakage current in one cell for example will result in under charge of that cell and over charge of the other cells.

Similarly, one bad battery in a 24V or 48V bank of several series/parallel connected 12V batteries can destroy the whole bank.

Moreover, when new cells or batteries are connected in series, they should all have the same initial state of charge. Small differences will be ironed out during absorption or equalise charging, but large differences will result in damage during charging due to excessive gassing of the cells or batteries with the highest initial state of charge.

A timely alarm can be generated by monitoring the midpoint of the battery bank (i. e. by splitting the string voltage in half and comparing the two string voltage halves).

Please note that the midpoint deviation will be small when the battery bank is at rest, and will increase:

- a) at the end of the bulk phase during charging (the voltage of well charged cells will increase rapidly while lagging cells still need more charging),
- b) when discharging the battery bank until the voltage of the weakest cells starts to decrease rapidly, and
- c) at high charge and discharge rates.

### 5.2.1 How the % midpoint deviation is calculated

$$d (\%) = 100 \cdot (V_t - V_b) / V$$

where:

d is the deviation in %

V<sub>t</sub> is the top string voltage

V<sub>b</sub> is the bottom string voltage

V is the voltage of the battery ( $V = V_t + V_b$ )

### 5.2.2 Setting the alarm level:

In case of VRLA (gel or AGM) batteries, gassing due to overcharging will dry out the electrolyte, increasing internal resistance and ultimately resulting in irreversible damage. Flat plate VRLA batteries start to lose water when the charge voltage approaches 15V (12V battery).

Including a safety margin, the midpoint deviation should therefore remain below 2% during charging.

When, for example, charging a 24V battery bank at 28.8V absorption voltage, a midpoint deviation of 2% would result in:

$$V_t = V \cdot d / 100 + V_b = V \cdot d / 100 + V - V_t$$

Therefore:

$$V_t = (V \cdot (1 + d / 100)) / 2 = 28.8 \cdot 1.02 / 2 \approx 14.7V$$

And:

$$V_b = (V \cdot (1 - d / 100)) / 2 = 28.8 \cdot 0.98 / 2 \approx 14.1V$$

Obviously, a midpoint deviation of more than 2% will result in overcharging the top battery **and** undercharging the bottom battery.

**Two** good reasons to set the midpoint alarm level at not more than  $d = 2\%$ .

This same percentage can be applied to a 12V battery bank with a 6V midpoint.

In case of a 48V battery bank consisting of 12V series connected batteries, the % influence of one battery on the midpoint is reduced by half. The midpoint alarm level can therefore be set at a lower level.

### 5.2.3 Alarm delay

In order to prevent the occurrence of alarms due to short term deviations that will not damage a battery, the deviation must exceed the set value during 5 minutes before the alarm is triggered.

A deviation exceeding the set value by a factor of two or more will trigger the alarm after 10 seconds.

### 5.2.4 What to do in case of an alarm during charging

In case of a new battery bank the alarm is probably due to differences in initial state of charge. If d increases to more than 3%: stop charging and charge the individual batteries or cells separately first, or reduce charge current substantially and allow the batteries to equalize over time.

If the problem persists after several charge-discharge cycles:

- a) In case of series-parallel connection disconnect the midpoint parallel connection wiring and measure the individual midpoint voltages during absorption charging to isolate batteries or cells which need additional charging.
- b) Charge and then test all batteries or cells individually.

In case of an older battery bank which has performed well in the past, the problem may be due to:

- a) Systematic under charge, more frequent charging or equalization charge needed (flooded deep cycle flat plate or OPzS batteries). Better and regular charging will solve the problem.
- b) One or more faulty cells: proceed as suggested under a) or b).

### 5.2.5 What to do in case of an alarm during discharging

The individual batteries or cells of a battery bank are not identical, and when fully discharging a battery bank the voltage of some cells will start dropping earlier than others. The midpoint alarm will therefore nearly always trip at the end of a deep discharge.

If the midpoint alarm trips much earlier (and does not trip during charging), some batteries or cells may have lost capacity or may have developed a higher internal resistance than others. The battery bank may have reached the end of service life, or one of more cells or batteries have developed a fault:

- a) In case of series-parallel connection, disconnect the midpoint parallel connection wiring and measure the individual midpoint voltages during discharging to isolate faulty batteries or cells.
- b) Charge and then test all batteries or cells individually.

### 5.2.6 The Battery Balancer (see datasheet on our website)

The Battery Balancer equalizes the state of charge of two series connected 12V batteries, or of several parallel strings of series connected batteries. When the charge voltage of a 24V battery system increases to more than 27.3V, the Battery Balancer will turn on and compare the voltage over the two series connected batteries. The Battery Balancer will draw a current of up to 0.7A from the battery (or parallel connected batteries) with the highest voltage. The resulting charge current differential will ensure that all batteries will converge to the same state of charge.

If needed, several balancers can be paralleled.

A 48V battery bank can be balanced with three Battery Balancers.

## 6 LITHIUM IRON PHOSPHATE BATTERIES (LiFePO<sub>4</sub>)

LiFePO<sub>4</sub> is the most commonly used Li-ion battery chemistry.

The factory default 'charged parameters' are in general also applicable to LiFePO<sub>4</sub> batteries.

Some battery chargers stop charging when the current drops below a set threshold. The tail current must be set higher than this threshold.

The charge efficiency of Li-ion batteries is much higher than of lead acid batteries: We recommend to set the charge efficiency at 99%.

When subjected to high discharge rates, LiFePO<sub>4</sub> batteries perform much better than lead-acid batteries. Unless the battery supplier advises otherwise, we recommend setting Peukert's exponent at 1.05.

### Important warning

Li-ion batteries are expensive and can be irreparably damaged due to over discharge or over charge.

Damage due to over discharge can occur if small loads (such as: alarm systems, relays, standby current of certain loads, back current drain of battery chargers or charge regulators) slowly discharge the battery when the system is not in use.

In case of any doubt about possible residual current draw, isolate the battery by opening the battery switch, pulling the battery fuse(s) or disconnecting the battery positive when the system is not in use.


**A residual discharge current is especially dangerous if the system has been discharged completely and a low cell voltage shut down has occurred. After shutdown due to low cell voltage, a capacity reserve of approximately 1Ah per 100Ah battery capacity is left in a Li-ion battery. The battery will be damaged if the remaining capacity reserve is drawn from the battery. A residual current of 4mA for example may damage a 100Ah battery if the system is left in discharged state during more than 10 days (4mA x 24h x 10 days = 0.96Ah).**

**A BMV 700 or 702 draws 4mA from a 12V battery (which increases to 15mA if the alarm relay is energised). The positive supply must therefore be interrupted if a system with Li-ion batteries is left unattended during a period long enough for the current draw by the BMV to completely discharge the battery.**

**We strongly recommend to use the BMV-712 Smart, with a current draw of only 1mA (12V battery), irrespective of the position of the alarm relay.**

## 7 DISPLAY

Overview of the BMV's display.

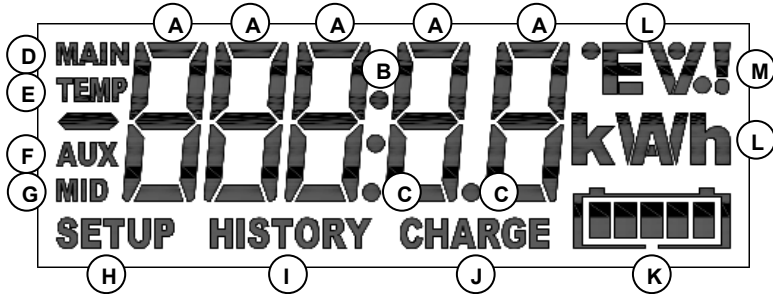

- A** The value of the selected item is displayed with these digits
- B** Colon
- C** Decimal separator
- D** Main battery voltage icon
- E** Battery temperature icon
- F** Auxiliary voltage icon
- G** Midpoint voltage icon
- H** Setup menu active
- I** History menu active
- J** Battery needs to be recharged (solid), or BMV is not synchronised (blinking, together with K)
- K** Battery state of charge indicator (blinks when not synchronised)
- L** Unit of the selected item. e.g. W, kW, kWh, h, V, %, A, Ah, °C, °F
- M** Alarm indicator


### Scrolling

The BMV features a scrolling mechanism for long texts. The scroll speed can be changed by modifying the setting scroll speed in the settings menu. See section 4.2.4. parameter 51

## 8 TECHNICAL DATA


Supply voltage range (BMV-700 / BMV-702)	6.5 ... 95 VDC
Supply voltage range (BMV-712)	6.5 ... 70 VDC
Supply voltage range (BMV-700H)	60... 385 VDC
Supply current (no alarm condition, backlight off)	
BMV-700/BMV-702	
@Vin = 12 VDC	3mA
With relay energised	15mA
@Vin = 24 VDC	2mA
With relay energised	8mA
BMV-712 Smart	
@Vin = 12 VDC	1mA
With relay energised	1mA (bistable relay)
@Vin = 24 VDC	0.8mA
With relay energised	0.8mA (bistable relay)
Fuse size on positive wire	1A, 20 x 5mm
BMV-700H	
@Vin = 144 VDC	3mA
@Vin = 288 VDC	3mA
Input voltage range auxiliary battery (BMV-702)	0 ... 95 VDC
Input current range (with supplied shunt)	-500 ... +500A
Operating temperature range	-20 ... +50°C
Readout resolution:	
Voltage (0 ... 100V)	±0.01V
Voltage (100 ... 385V)	±0.1V
Current (0 ... 10A)	±0.01A
Current (10 ... 500A)	±0.1A
Current (500 ... 9999A)	±1A
Amp hours (0 ... 100Ah)	±0.1Ah
Amp hours (100 ... 9999Ah)	±1Ah
State of charge (0 ... 100%)	±0.1%
Time-to-go (0 ... 1h)	±0.1h
Time-to-go (1 ... 240h)	±1h
Temperature	±1°C/°F
Power (-100 ... 1kW)	±1W
Power (-100 ... 1kW)	±1kW
Voltage measurement accuracy	±0.3%
Current measurement accuracy	±0.4%
Potential free contact	
Mode	Configurable
Default mode	Normally open
Rating	1A up to 30VDC 0,2A up to 70VDC 1A up to max 50VAC
Dimensions:	
Front panel	69 x 69mm
Body diameter	52mm
Overall depth	31mm
Net weight:	
BMV	70g
Shunt	315g
Material	
Body	ABS
Sticker	Polyester

- EN:** BMV connection for midpoint voltage  
**NL:** BMV-verbinding voor middelpunt-voltage  
**FR:** Raccordement BMV pour tension médiane  
**DE:** BMV-Anschluss für Mittelspannung  
**ES:** Conexión BMV para la tensión del punto medio  
**SE:** BMV-koppling för mittzonsspänning

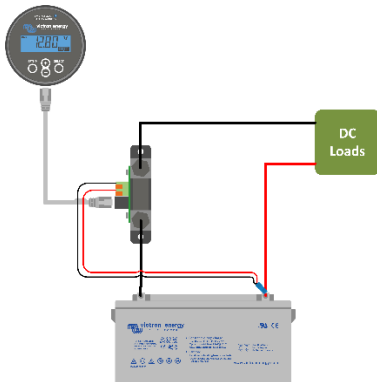

- EN:** BMV with temperature sensor (fuses not shown, BMV-702 and 712 only)  
**NL:** BMV met temperatuursensor (zekeringen niet getoond, enkel BMV-702 en 712)  
**FR:** BMV avec capteur de température (fusibles non illustré, BMV-702 et 712 uniquement)  
**DE:** BMV mit Temperaturfühler (Sicherungen nicht abgebildet, nur BMV-702 und 712)  
**ES:** BMV con sensor de temperatura (no se muestran los fusibles, BMV-702 y 712 solamente)  
**SE:** BMV med temperatursensor (säkringar visas inte, endast BMV-702 och 712)

- EN: BMV connection for midpoint voltage**  
**NL: BMV-verbinding voor middelpunt-voltage**  
**FR: Raccordement BMV pour tension médiane**  
**DE: BMV-Anschluss für Mittelspannung**  
**ES: Conexión BMV para la tensión del punto medio**  
**SE: BMV-koppling för mittzonsspänning**

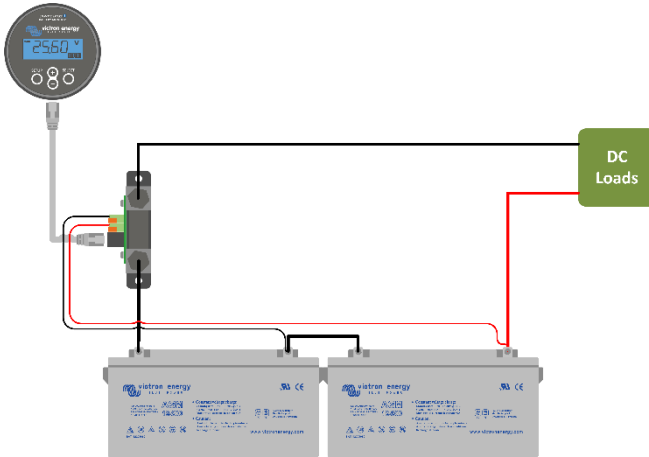

- EN: Midpoint voltage monitoring (fuses not shown, BMV-702 and 712 only)**  
**NL: Controle middelpunt-voltage (zekeringen niet getoond, enkel BMV-702 en 712)**  
**FR: Suivi de la tension médiane (fusibles non illustré, BMV-702 et 712 uniquement)**  
**DE: Mittelspannungsüberwachung (Sicherungen nicht abgebildet, nur BMV-702 und 712)**  
**ES: Seguimiento de la tensión del punto medio (no se muestran los fusibles, BMV-702 y 712 solamente)**  
**SE: Spänningsövervakning av mittzon (säkringar visas inte, endast BMV-702 och 712)**

# Victron Energy Blue Power

Distributor:

Serial number:

Version : 13  
Date : April 24<sup>th</sup>, 2020

Victron Energy B.V.  
De Paal 35 | 1351 JG Almere  
PO Box 50016 | 1305 AA Almere | The Netherlands

General phone : +31 (0)36 535 97 00  
E-mail : [sales@victronenergy.com](mailto:sales@victronenergy.com)

[www.victronenergy.com](http://www.victronenergy.com)